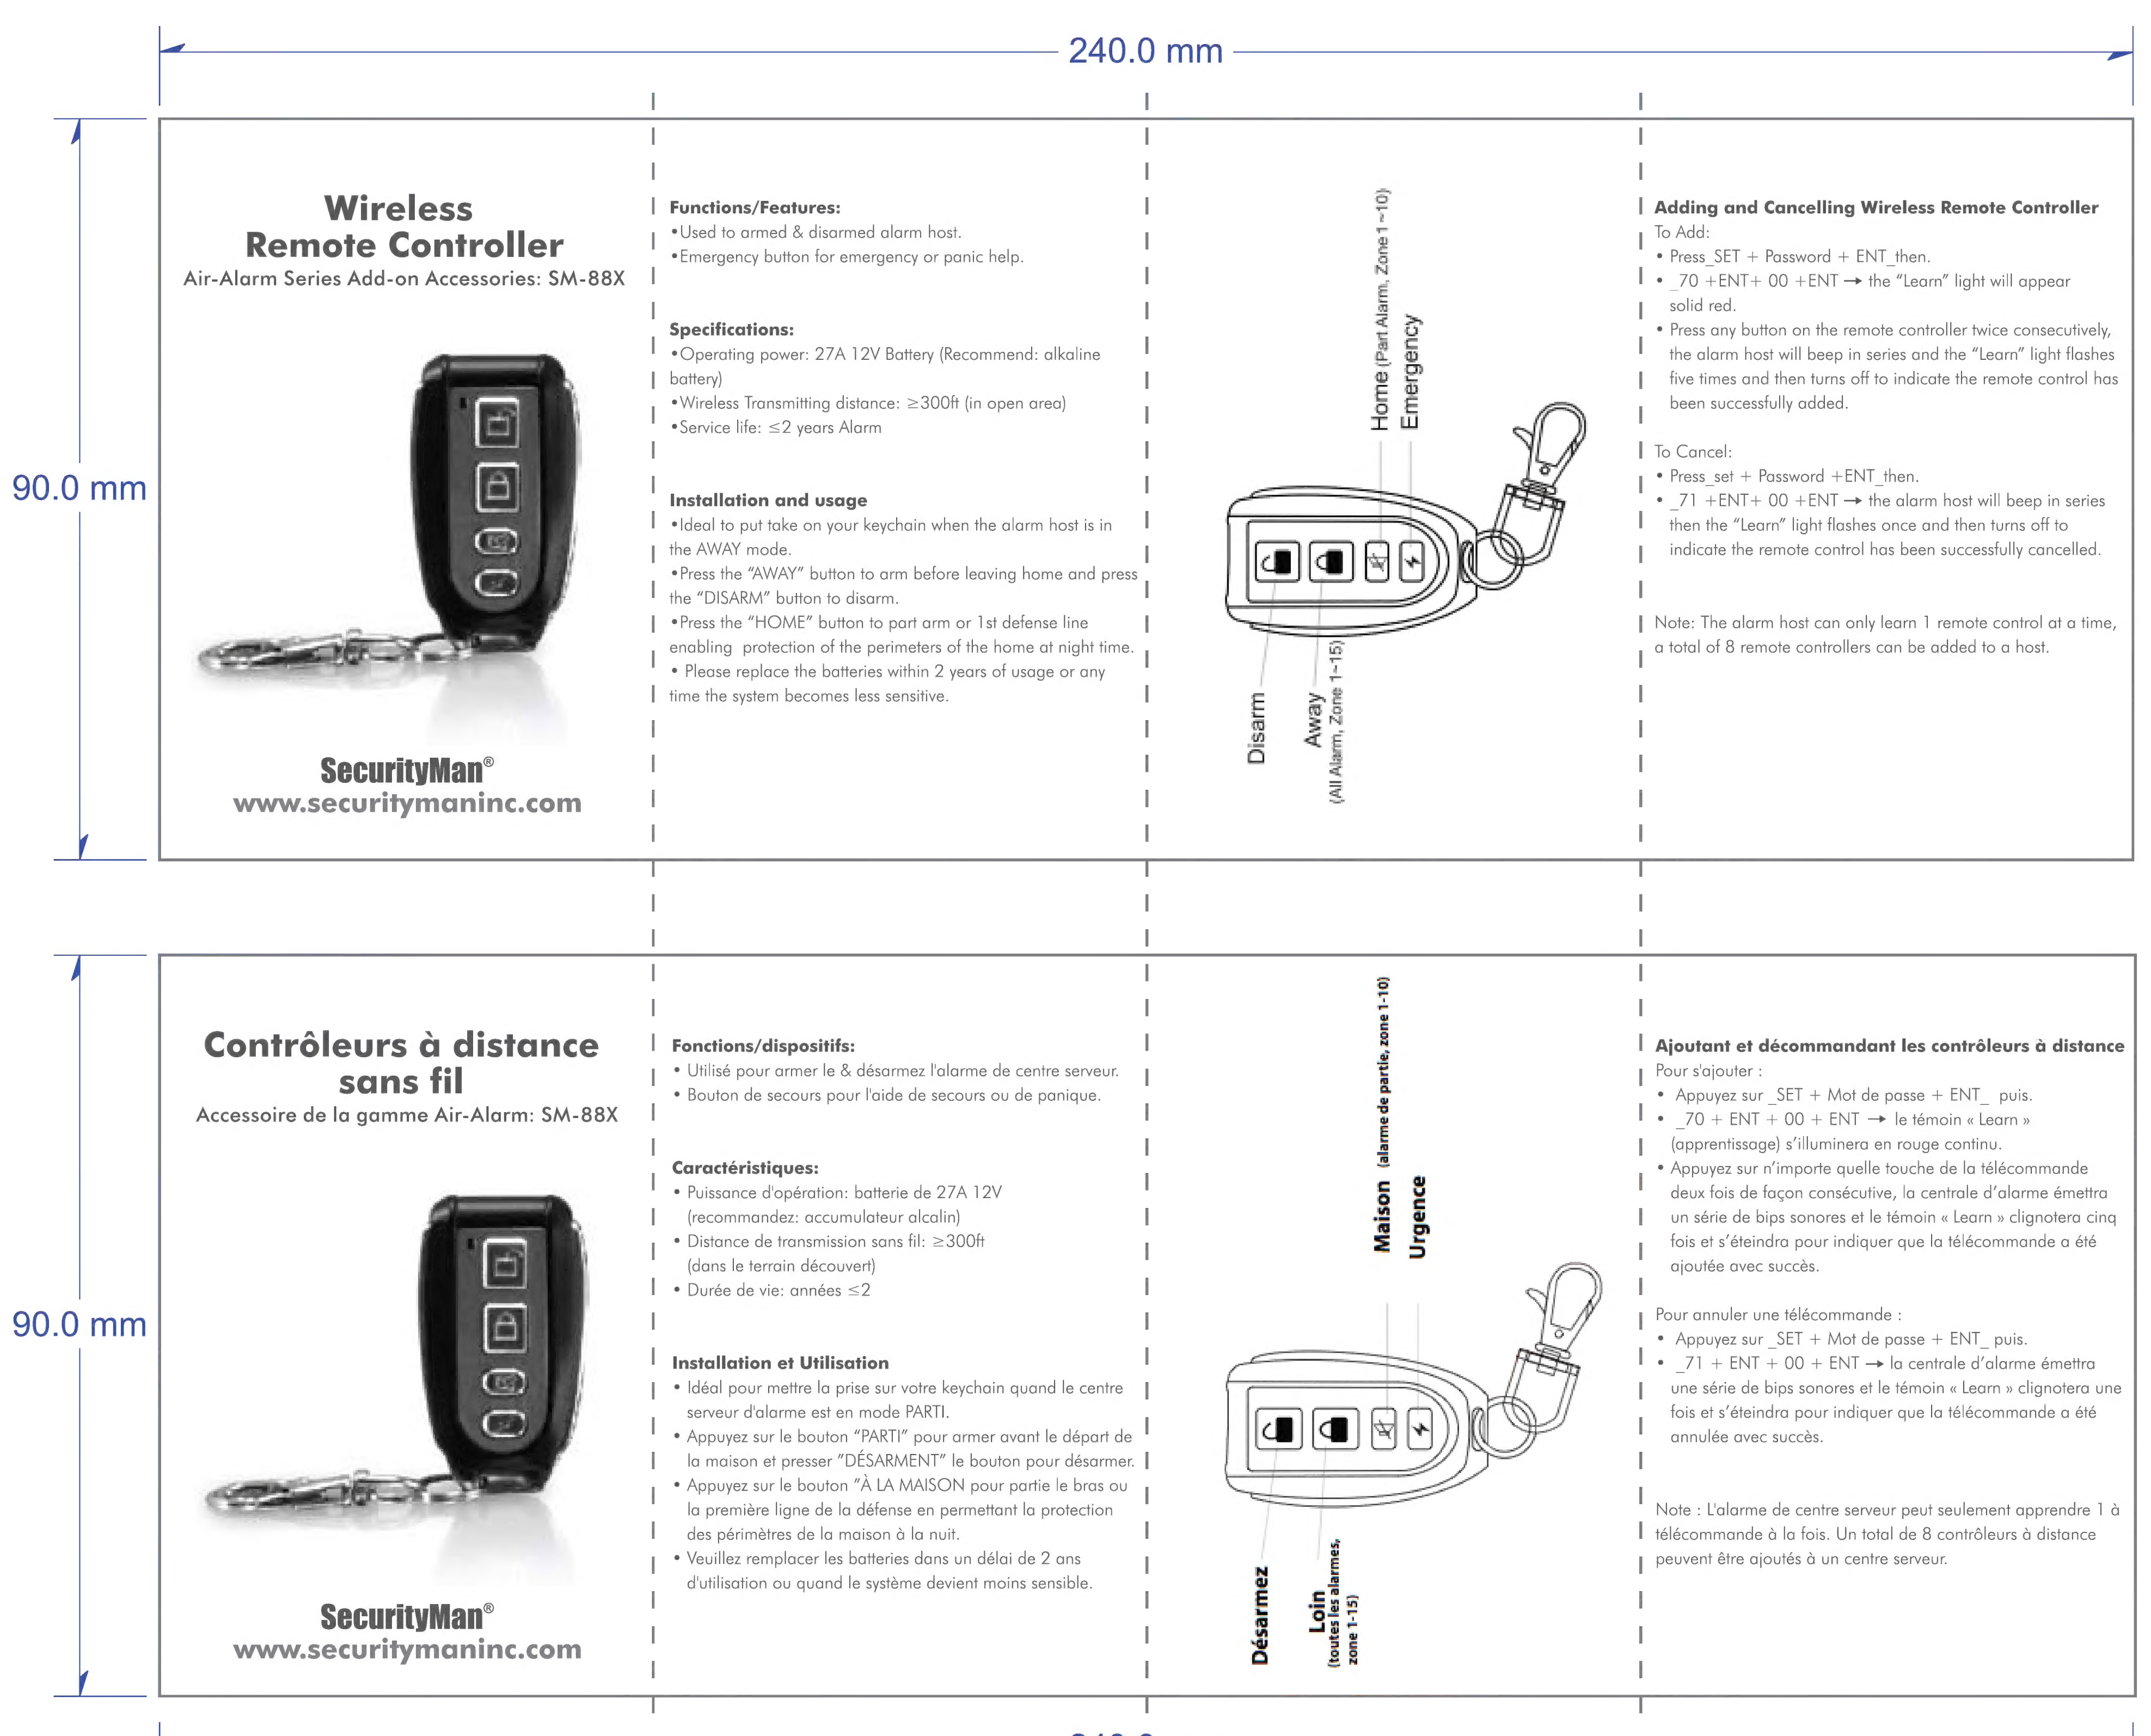


Wireless Remote Controller

Air-Alarm Series Add-on Accessories: SM-88X

SecurityMan®
www.securitymaninc.com

Functions/Features:

- Used to armed & disarmed alarm host.
- Emergency button for emergency or panic help.

Specifications:

- Operating power: 27A 12V Battery (Recommend: alkaline battery)
- Wireless Transmitting distance: ≥300ft (in open area)
- Service life: ≤2 years Alarm

Installation and usage

- Ideal to put take on your keychain when the alarm host is in the AWAY mode.
- Press the "AWAY" button to arm before leaving home and press the "DISARM" button to disarm.
- Press the "HOME" button to part arm or 1st defense line enabling protection of the perimeters of the home at night time.
- Please replace the batteries within 2 years of usage or any time the system becomes less sensitive.

Adding and Cancelling Wireless Remote Controller

To Add:

- Press_SET + Password + ENT_then.
- _70 +ENT+ 00 +ENT → the "Learn" light will appear solid red.
- Press any button on the remote controller twice consecutively, the alarm host will beep in series and the "Learn" light flashes five times and then turns off to indicate the remote control has been successfully added.

To Cancel:

- Press_set + Password +ENT_then.
- _71 +ENT+ 00 +ENT → the alarm host will beep in series then the "Learn" light flashes once and then turns off to indicate the remote control has been successfully cancelled.

Note: The alarm host can only learn 1 remote control at a time, a total of 8 remote controllers can be added to a host.

Front

Contrôleurs à distance sans fil

Accessoire de la gamme Air-Alarm: SM-88X

SecurityMan®
www.securitymaninc.com

Fonctions/dispositifs:

- Utilisé pour armer le & désarmez l'alarme de centre serveur.
- Bouton de secours pour l'aide de secours ou de panique.

Caractéristiques:

- Puissance d'opération: batterie de 27A 12V (recommandez: accumulateur alcalin)
- Distance de transmission sans fil: ≥300ft (dans le terrain découvert)
- Durée de vie: années ≤2

Installation et Utilisation

- Idéal pour mettre la prise sur votre keychain quand le centre serveur d'alarme est en mode PARTI.
- Appuyez sur le bouton "PARTI" pour armer avant le départ de la maison et presser "DÉSARMENT" le bouton pour désarmer.
- Appuyez sur le bouton "À LA MAISON pour partie le bras ou la première ligne de la défense en permettant la protection des périmètres de la maison à la nuit.
- Veuillez remplacer les batteries dans un délai de 2 ans d'utilisation ou quand le système devient moins sensible.

Ajoutant et décommandant les contrôleurs à distance

Pour s'ajouter :

- Appuyez sur _SET + Mot de passe + ENT_ puis.
- _70 + ENT + 00 + ENT → le témoin « Learn » (apprentissage) s'illuminera en rouge continu.
- Appuyez sur n'importe quelle touche de la télécommande deux fois de façon consécutive, la centrale d'alarme émettra un série de bips sonores et le témoin « Learn » clignotera cinq fois et s'éteindra pour indiquer que la télécommande a été ajoutée avec succès.

Pour annuler une télécommande :

- Appuyez sur _SET + Mot de passe + ENT_ puis.
- _71 + ENT + 00 + ENT → la centrale d'alarme émettra une série de bips sonores et le témoin « Learn » clignotera une fois et s'éteindra pour indiquer que la télécommande a été annulée avec succès.

Note : L'alarme de centre serveur peut seulement apprendre 1 à télécommande à la fois. Un total de 8 contrôleurs à distance peuvent être ajoutés à un centre serveur.

Back